

To quickly start your Toro PowerMax HD 928, insert the ignition key, press the primer bulb three times, and move the choke lever to the "start" position. Then, either pull the recoil starter cord or use the electric starter to start the engine. Once the engine starts, gradually slide the choke lever back to the "run" position and unplug it if you used the electric start.

## Detailed steps for starting

1. Insert the ignition key: Make sure the plastic key is fully inserted into its slot.
2. Prime the engine: Press the primer bulb three times to get fuel into the engine.
3. Engage the choke: Move the choke lever to the "start" position, which is typically all the way to the left.
4. Start the engine:
  1. For recoil start: Pull the starter cord.
  2. For electric start: Plug in an extension cord and press the electric start button. Do not hold the button for more than 5 seconds at a time.
5. Disengage the choke: Once the engine is running smoothly, slide the choke lever to the "run" position (typically to the right).
6. Unplug the electric cord: If you used the electric start, unplug the extension cord after the engine is running.

## Before starting

- Check the oil level and add oil if necessary.
- Ensure the area is clear of any objects that could be thrown by the snowblower.
- Use fresh, non-ethanol fuel with an octane rating of 87 or higher and a fuel stabilizer for best results.